




Bowers and Wilkins T7 Speaker Driver Replacement

Replace your broken or blown out speaker drivers.

Written By: Oluwagbemisola Aderibigbe

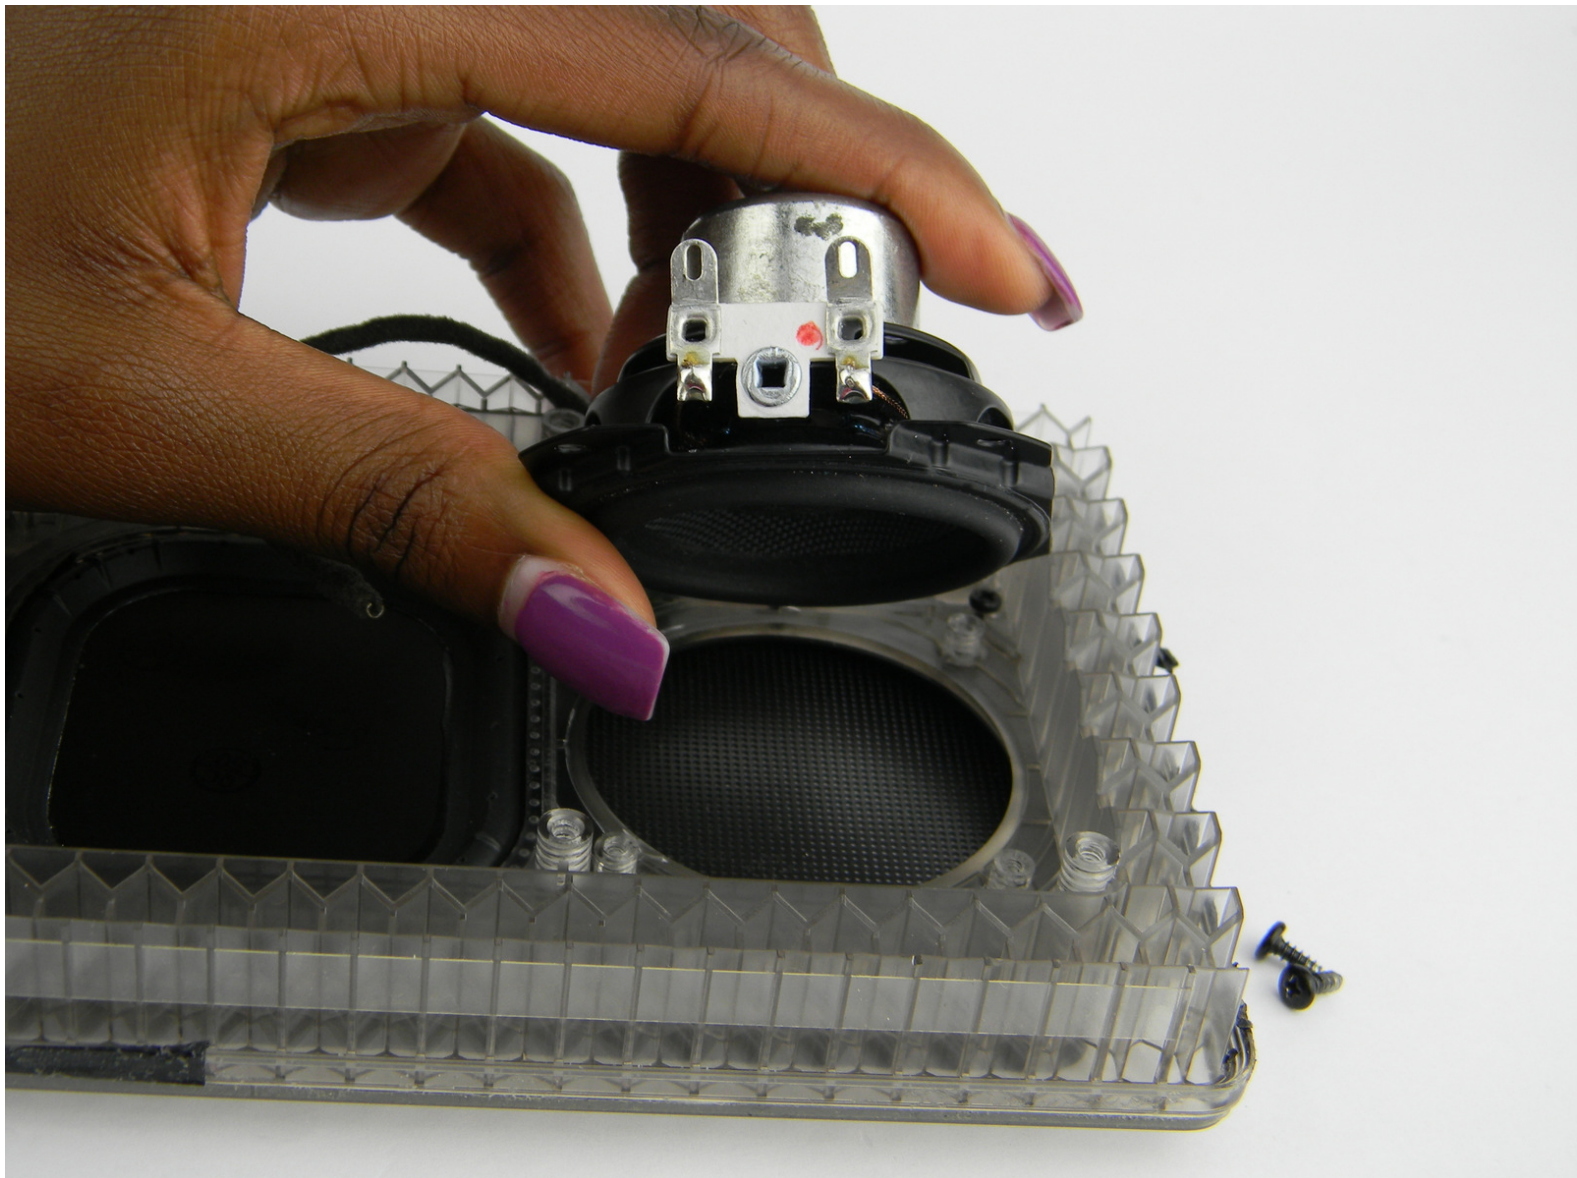

INTRODUCTION

Use this guide to learn how to replace your left and right speaker drivers for the Bowers and Wilkins T7 Bluetooth Speaker.



TOOLS:

- [JIS Driver Set](#) (1)
 - [iFixit Opening Tools](#) (1)
 - [Tweezers](#) (1)
-

Step 1 — Access Panel



⚠ As with all electronic devices, make sure your device is powered off before you begin.


- Gently lift up the access panel; it should easily "pop" open.

Step 2





- Remove 14mm screws on the front panel with a J1 Phillips head screwdriver.
- There are 8 screws in total.

Step 3

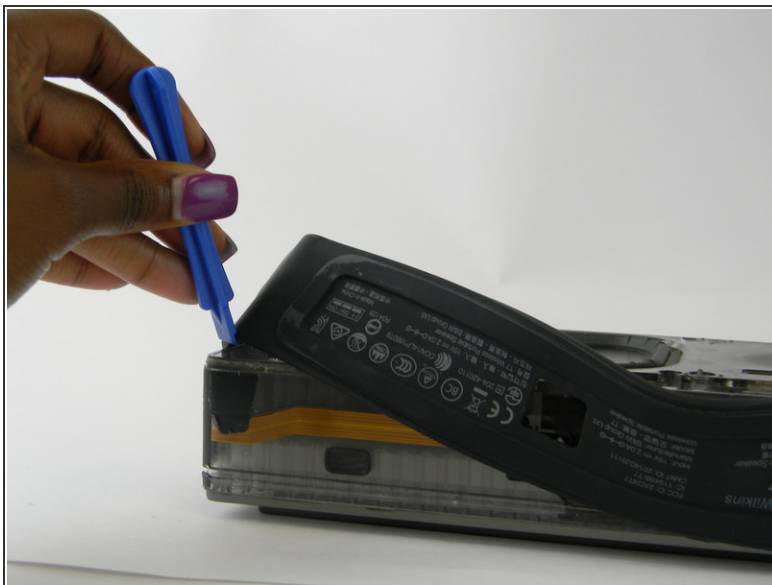


- ⚠ Be gentle, the rubber seal is fragile and easy to tear, resulting in cosmetic damage to your device.
- Using the ifixit Opening Tool, carefully pry off the rubber seal around the sides.
- ⓘ The seal is held by adhesive, if this is proving difficult you can use a heat gun to help the process.

Step 4

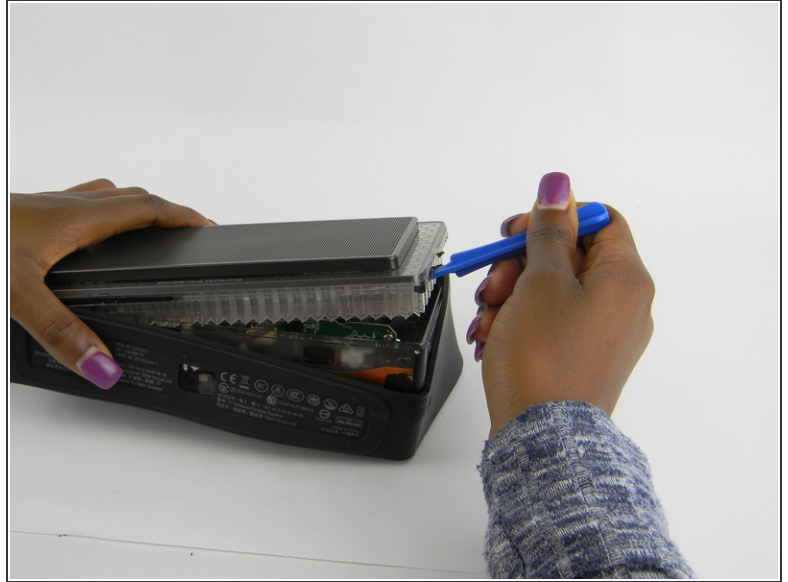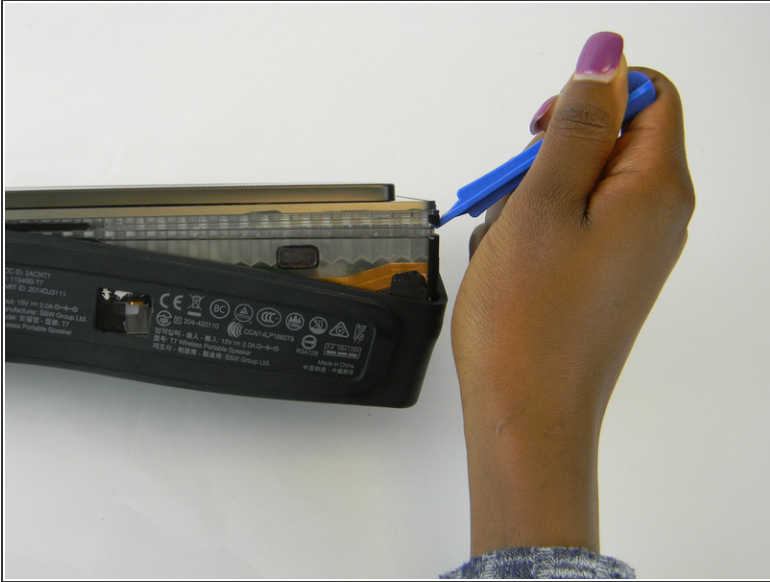



- i** The cover is the most difficult part to remove. As you work, pry continuously, moving the tool around the device, working it a little further as you go.
- Using the iFixit Opening Tool, pry open at the seam found under the rubber seal.
 - As the cover starts to come off, you can lift up using your hand.

Step 5

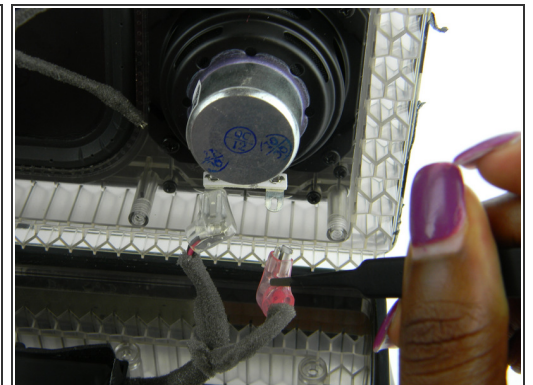


- Gently squeeze the internal locking mechanism inside the red and white terminals with either your fingers or a pair of precision tweezers.
- While squeezing the internal locking mechanism, pull back the terminal.
- Repeat this process for the second speaker.

Step 6 — Speaker Driver

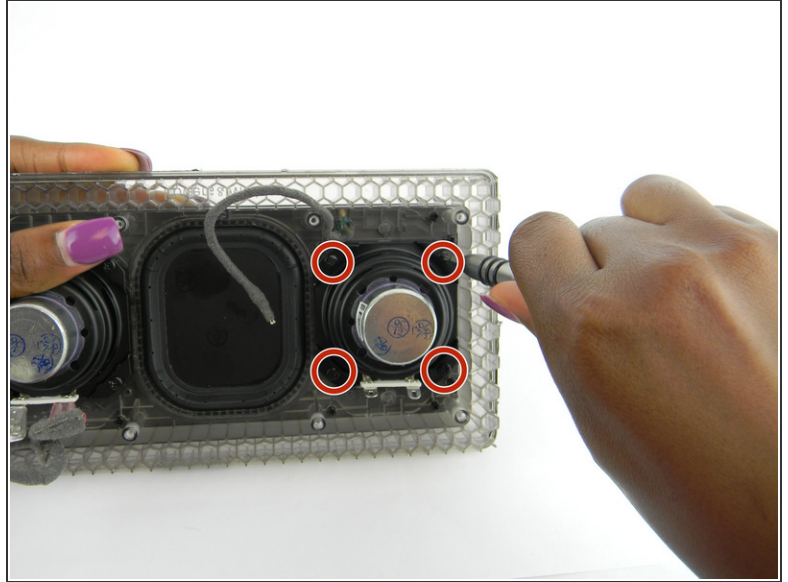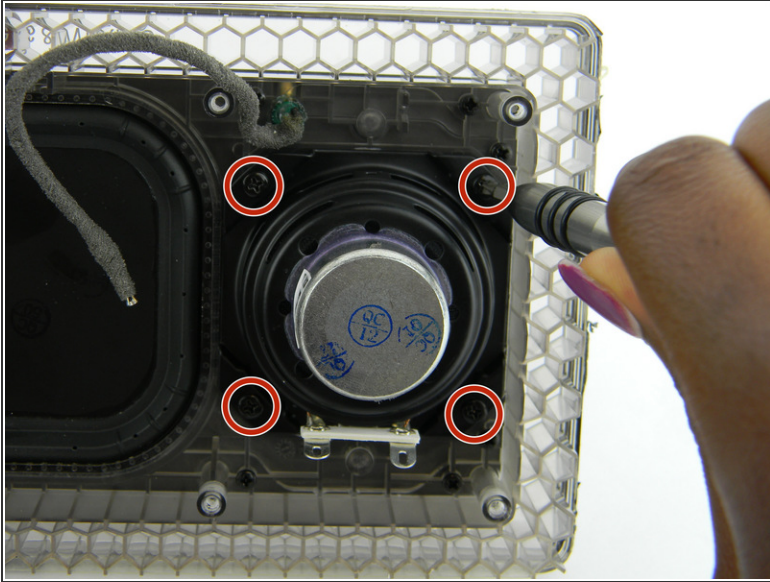

- Remove the 7mm screws around the speaker using a J100 Phillips head screwdriver.
- There are 4 screws in total around each speaker.

Step 7

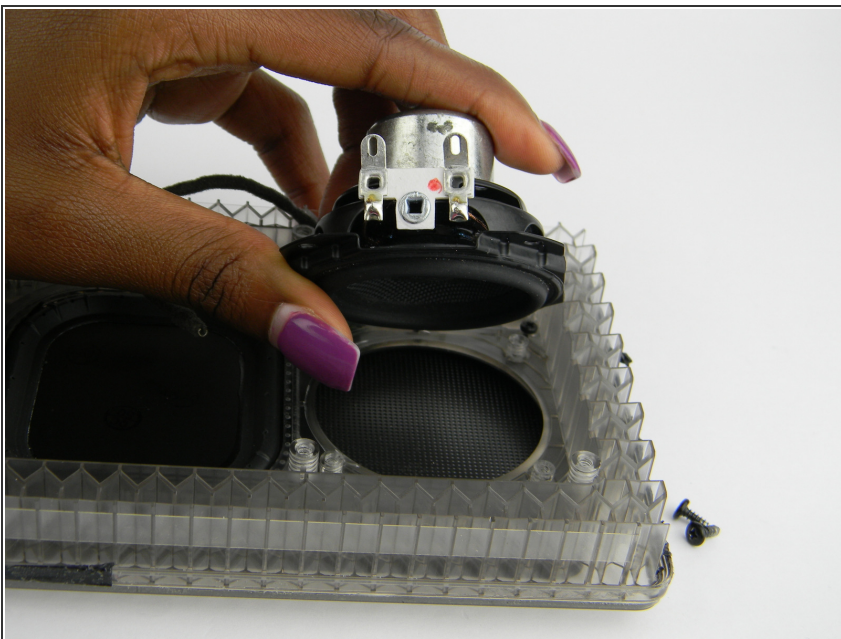

- Now that all the screws are removed, pull straight up on the speaker drive to remove the speaker drive component.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-08-11 01:20:40 PM.